


DIY handmade goods— COFFEE TIME

C006

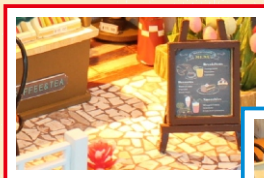

C006 Instruction Manual

NOTICE OF ASSEMBLE

Making tips


1. LED wiring indication:
White=Positive; Grey=Negative.
2. Use a craft blade to carefully skim over the plastic to bare the copper wire.
3. For LED wiring extension, please refer to the below steps:



Twist the copper of both LED wire and extension wire together.




Do the same on the white wire.
Remarks: Tie a knot at the end of the grey wire to differentiate the polarity.

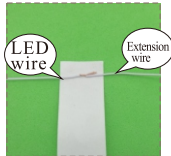


Place the duly twist wire on the tapes provided.




Roll and wrap the wire.

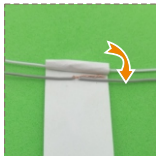

Place another wire next to it.
Remarks: DO NOT contact both copper wire to avoid short circuit.

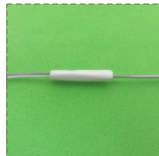

Roll and wrap it together.

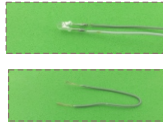

Warnings

- The product is not suitable for children under 14 years old. The should be under custody of adults when playing with the product.
- There are small parts, please do not swallow them for avoiding dangerous accidents.

Tips for assembling

1. Pictures shown on the package may be slightly different from the actual product.
2. Please use the provided tracing paper for cutting purpose to achieve the best outcome.
3. Product designs and specification may be subject to change without advance notice for purpose of making improvement.
4. Testing on LED function:



DO NOT contact the LED wire end direct to the battery cell.



Use the provide battery holder. Make sue the correct polarity.

How to assemble the battery holder



1. Material and tools needed:
- Battery holder, LED bulb, tape.



2. Twist the following wire together:
(I) WHITE wire from the battery box with the GREY wire from LED bulb.
(II) GREY wire from the battery box with the WHITE wire from LED bulb.




3. Wrap the exposed wire with the tapes.



Rubber paper

4. Tear off the rubber paper

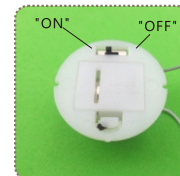

5. Set the black key on the battery box to one side of "ON" as shown.




6. Ture on the power and complete the installation.




Product information





Cake cabinet

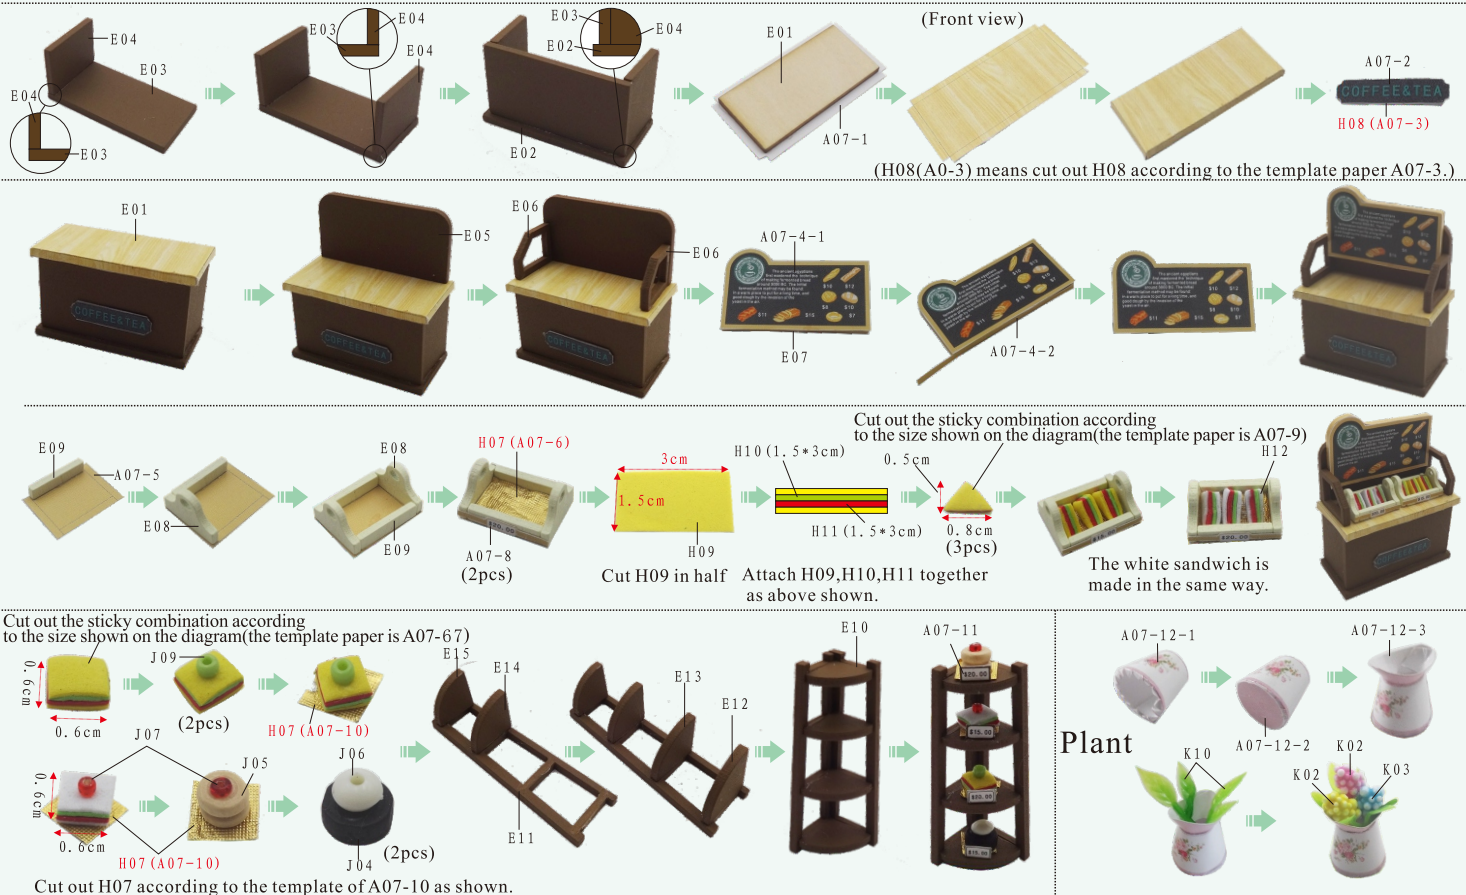

Bar counter

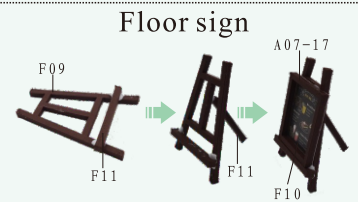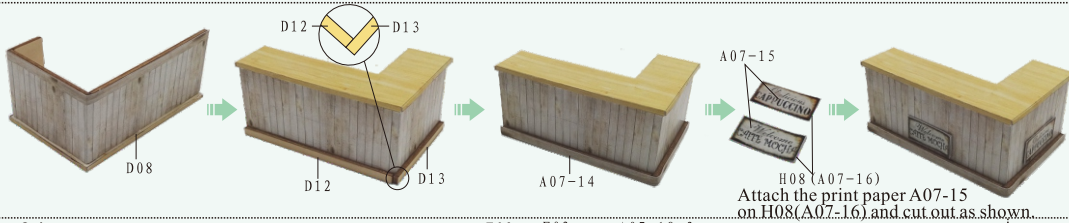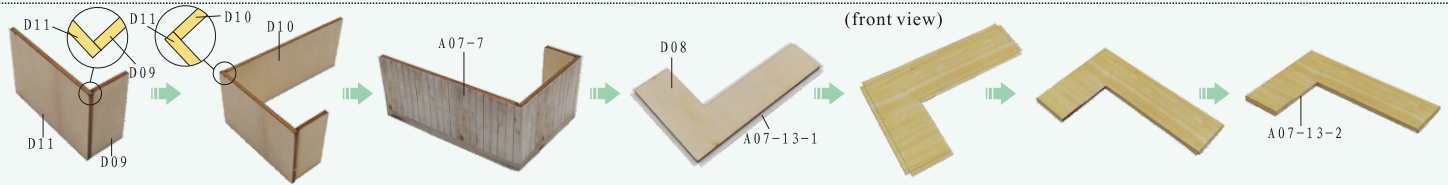

Refrigerator

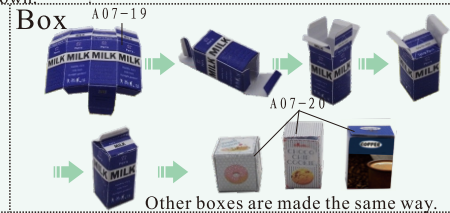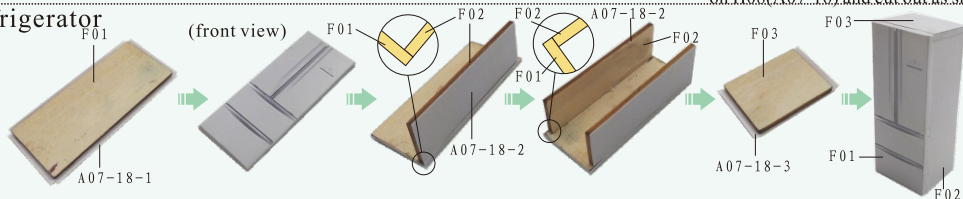




Coffee machina





Plate






Wall cabinet

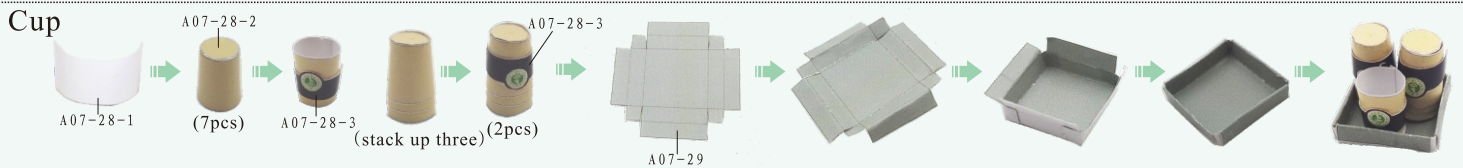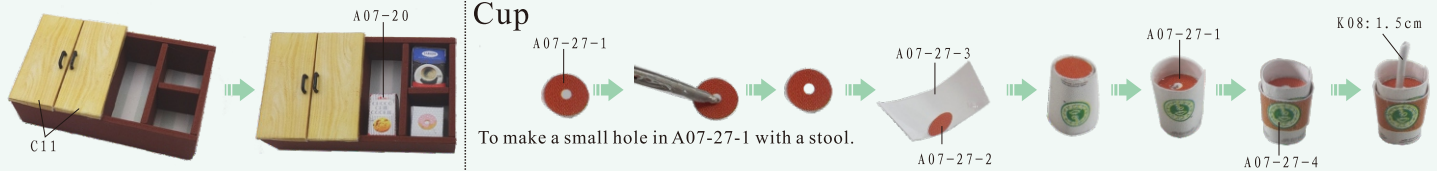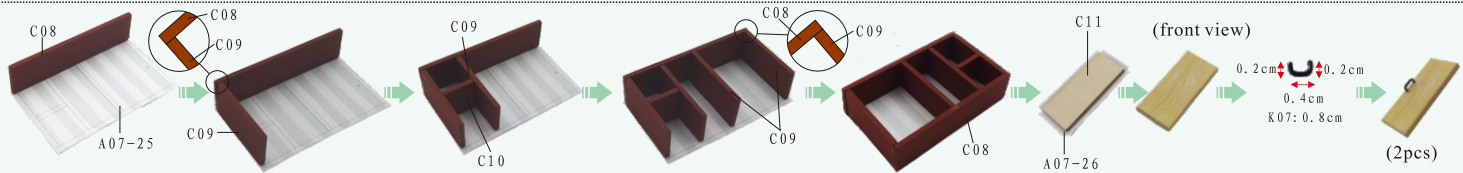


Cabinet

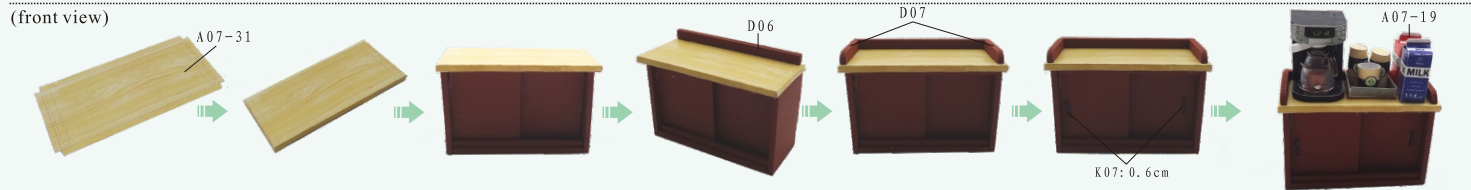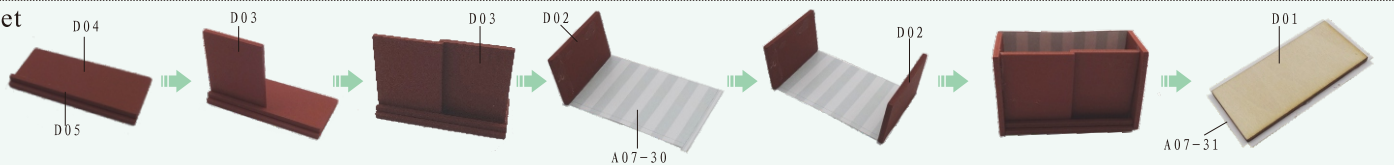

Bar stool

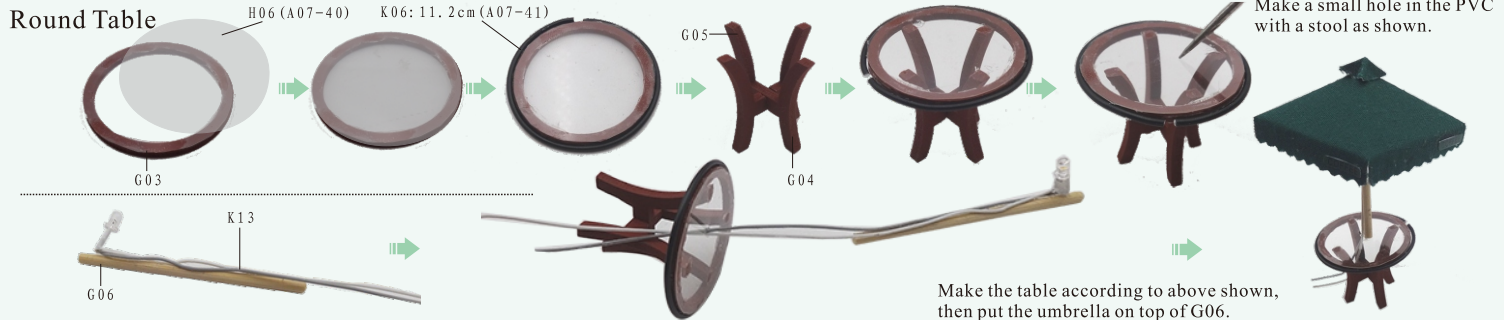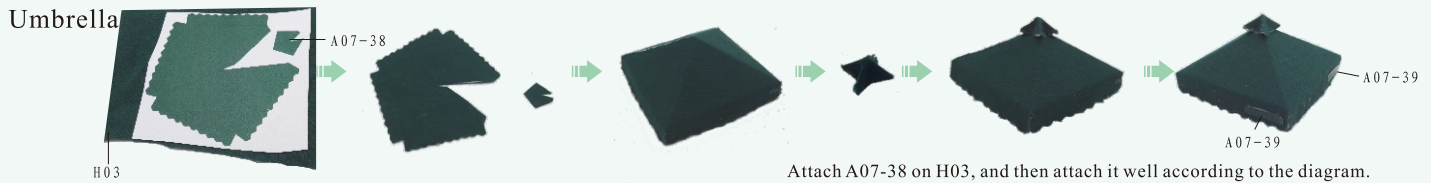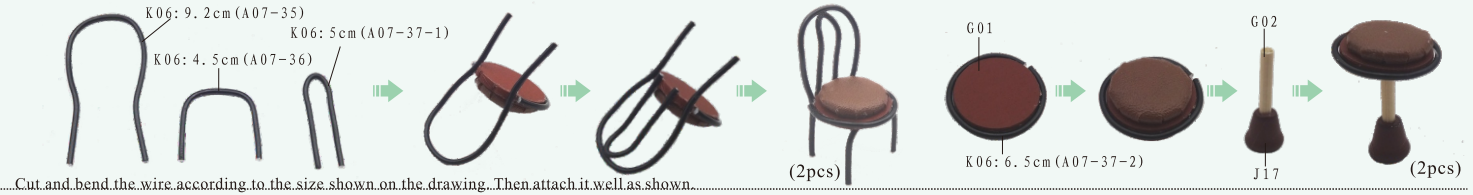


Service plate

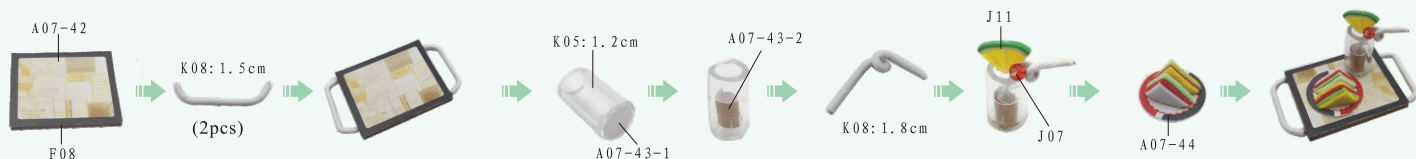

Bag



Memu

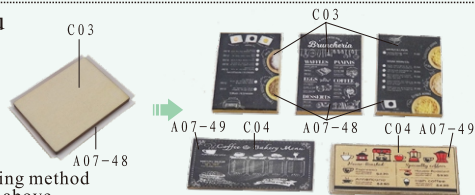

The making method are same above.

Shop sign




Plant



Fold and cut it as shown.


Stick the wire as above shown and cut out the leaves.

Flower groove

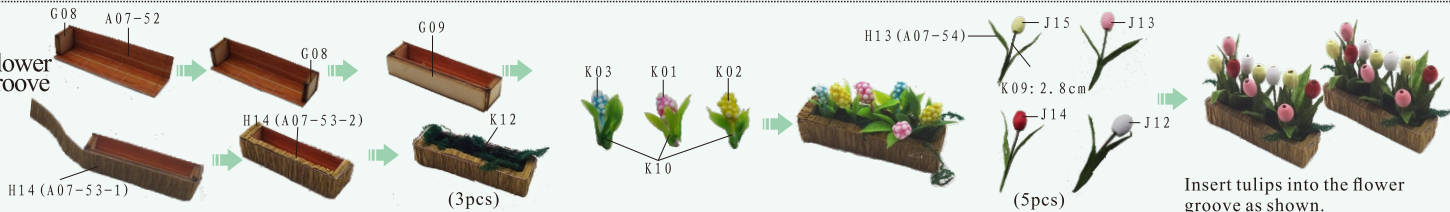


Insert tulips into the flower groove as shown.








Outer frame

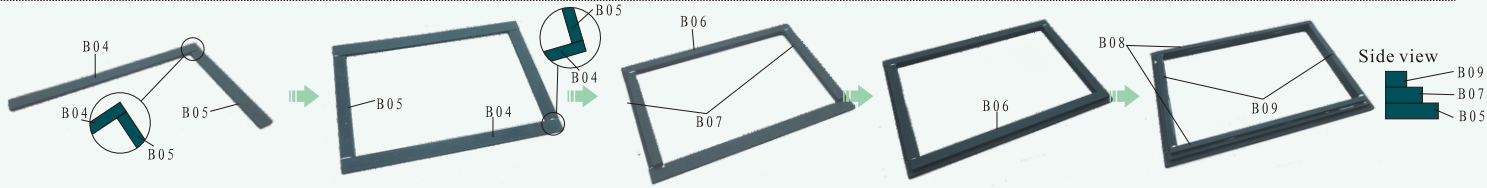


Shop sign

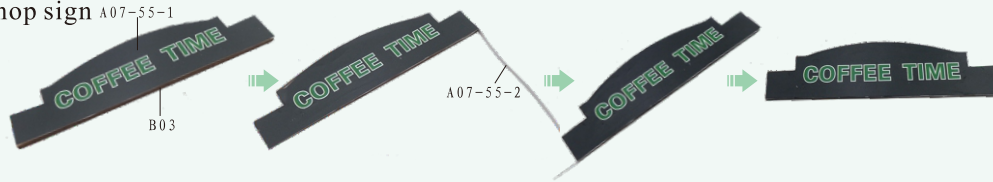

Rain shed

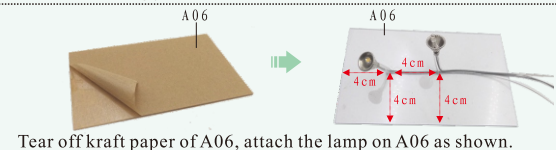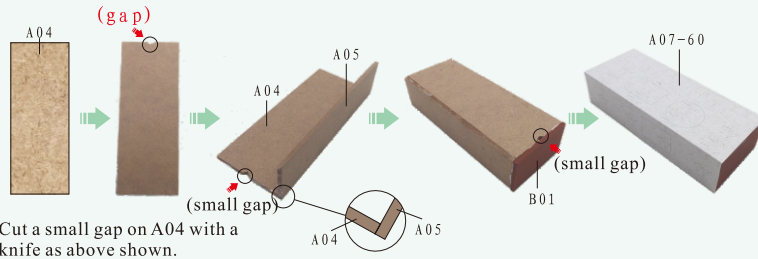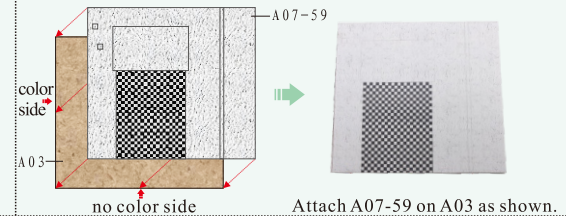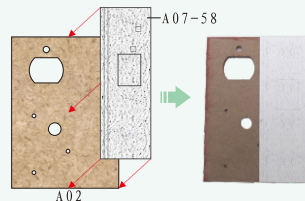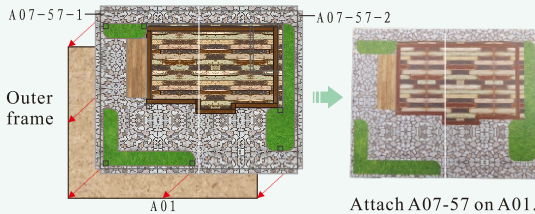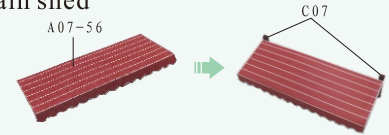

Outer frame

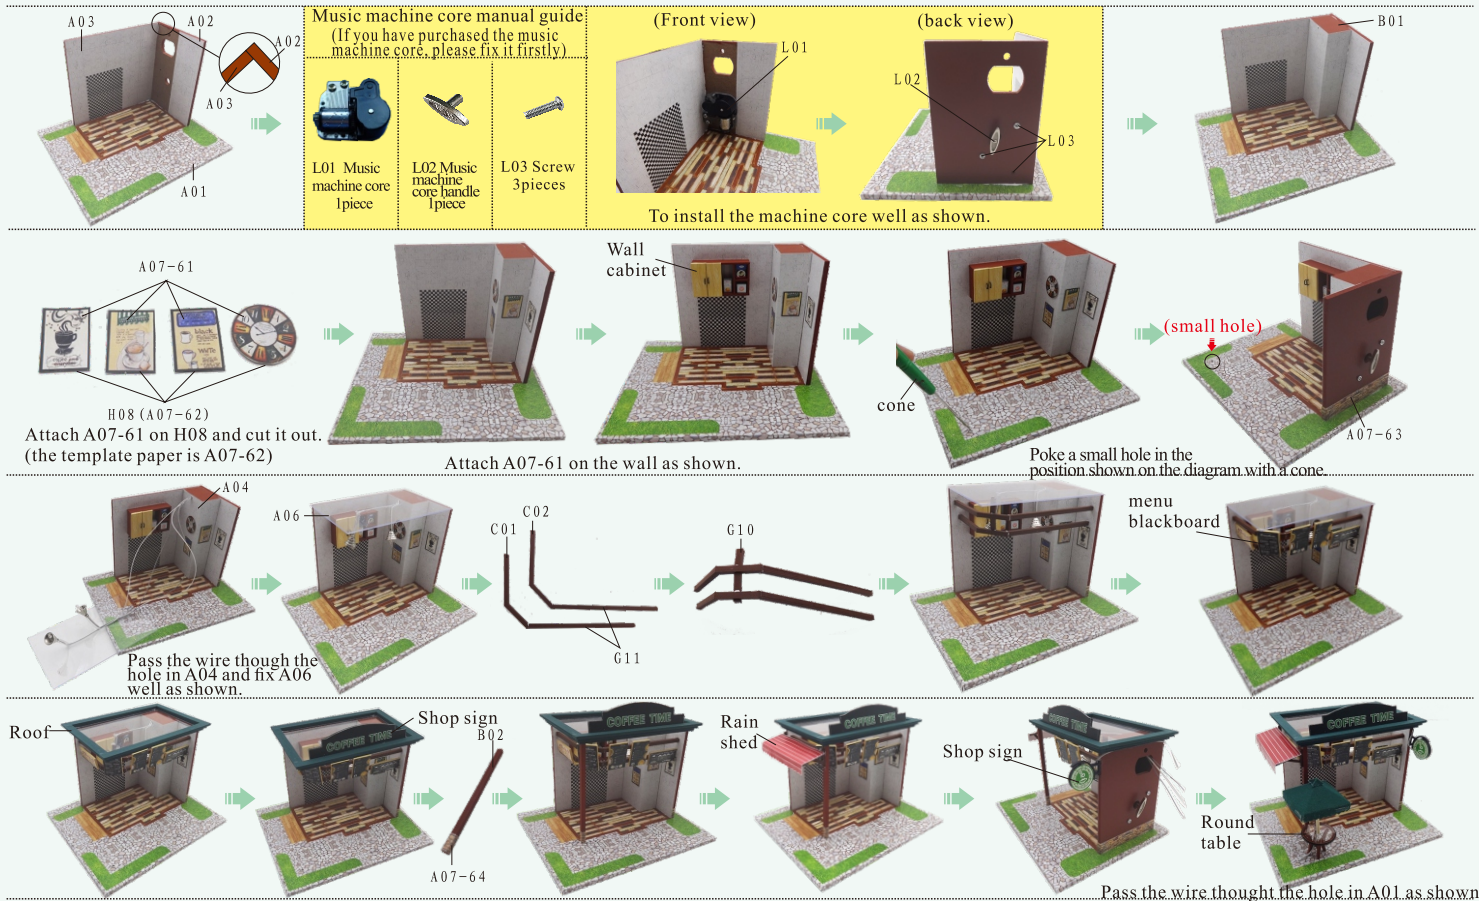

How to assemble the battery holder


Statement: the lamp wires cannot be inserted into the output socket.

- Please notice the place of anode and cathode when pit in the batteries
- Rechargeable batteries are not blunt electricity
- Rechargeable batteries can only be charged under adult supervision
- Rechargeable batteries should be removed from the toy before charging
- Different types of batteries cannot mix; Do not mix new batteries in use with semi-used batteries.

- Run out of battery should be removed from the toy
- The power shall not be short circuit

Trim all the LED wiring to the same length.


Use a craft blade to carefully skim over the plastic to bare the copper wire. Twist the same color wire together.

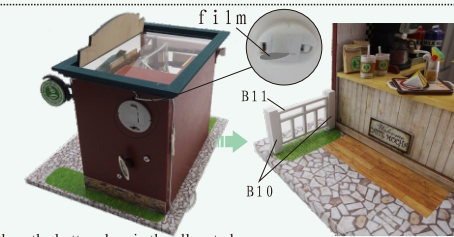

Place the battery box in the allocated space.



Flower

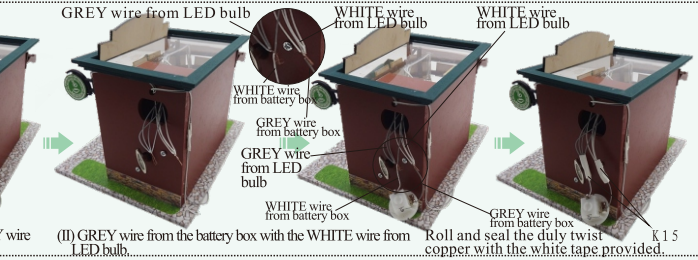


Twist the following wire together.

(I) WHITE wire from the battery box with the GREY wire from LED bulb.

(II) GREY wire from the battery box with the WHITE wire from LED bulb.

Roll and seal the duly twist copper with the white tape provided.

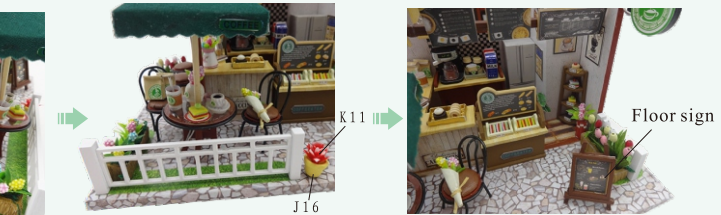

Pot plant



Installation of dust proof cover
(For updated version, the parts need to be purchased separately)




L04 Transparent cover
0.18*16*20 (3pieces)



L05 Transparent cover
0.18*15.64*16 (2pieces)



1. Tear off kraft paper of each piece of transparent cover.

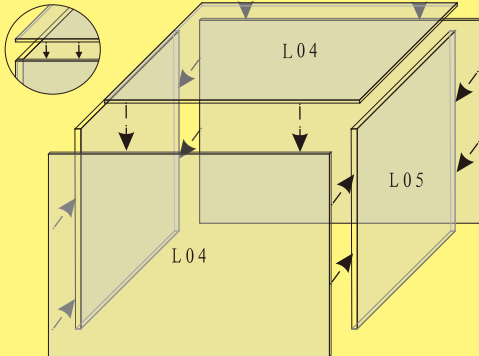

2. Paste L04 and L05 together to complete the dust proof cover as shown.

Photo of Dust proof cover



Photo Gallery



Attention: Please keep the instruction manual for future enquires after installation.